



A1 COLLEGAMENTO IN SERIE PER LED IN CORRENTE COSTANTE
SERIES CONNECTION FOR CONSTANT CURRENT LED

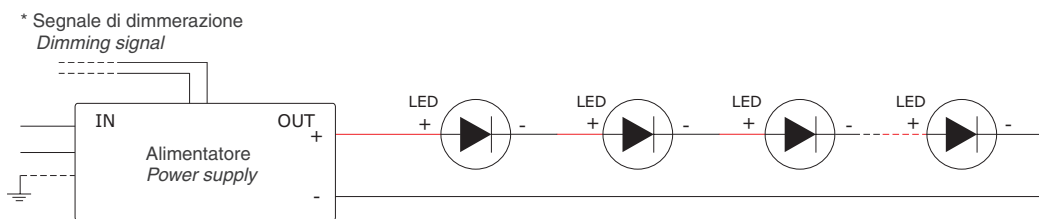

| Codici alimentatori Power supply units | |
|---|------------|
| 350 mA | 500 mA |
| PSU.0001.0 | PSU.0001.0 |
| PSU.0023.0 | PSU.0002.0 |
| PSU.0024.0 | PSU.0003.0 |
| PSU.0025.0 | PSU.0004.0 |
| PSU.0026.0 | PSU.0022.0 |
| PSU.0027.0 | PSU.0028.0 |
| PSU.0030.0 | PSU.0030.0 |
| | PSU.0034.0 |

* Versione dimmerabile / Dimmable version

E1 COLLEGAMENTO IN SERIE CON CONTROLLO DI CORRENTE PER LED IN CORRENTE COSTANTE
SERIES CONNECTION WITH CURRENT CONTROL FOR CONSTANT CURRENT LED

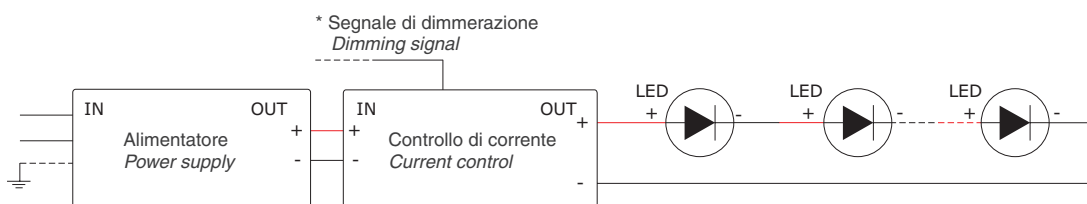

* Versione dimmerabile (collegare il segnale di dimmerazione all'uscita del dispositivo dimmer cod. ECG.0002.0, ECG.0003.0 o dell'interfaccia DMX cod. ECG.0011.0 o ECG.0006.0 o del convertitore DALI cod. ECG.0028.0)
 * Dimmable version (connect the dimmable signal to the output of the dimmer device cod. ECG.0002.0, ECG.0003.0, to the DMX interface cod. ECG.0011.0 or ECG.0006.0 or to the DALI converter cod. ECG.0028.0)

Codici alimentatori
Power supply units


| 24 Vdc |
|------------|
| PSU.0001.0 |
| PSU.0005.0 |
| PSU.0006.0 |
| PSU.0007.0 |
| PSU.0008.0 |
| PSU.0009.0 |
| PSU.0010.0 |
| PSU.0011.0 |
| PSU.0012.0 |
| PSU.0013.0 |
| PSU.0014.0 |
| PSU.0015.0 |
| PSU.0016.0 |
| PSU.0017.0 |
| PSU.0018.0 |
| PSU.0020.0 |
| PSU.0021.0 |
| PSU.0030.0 |

Codici controllo di corrente
Current control codes

| 350 mA | 500 mA |
|-------------|-------------|
| ECG.0012.0* | ECG.0014.0* |

L1

DMX - COLLEGAMENTO IN SERIE PER LED IN CORRENTE COSTANTE
DMX - SERIES CONNECTION FOR CONSTANT CURRENT LED

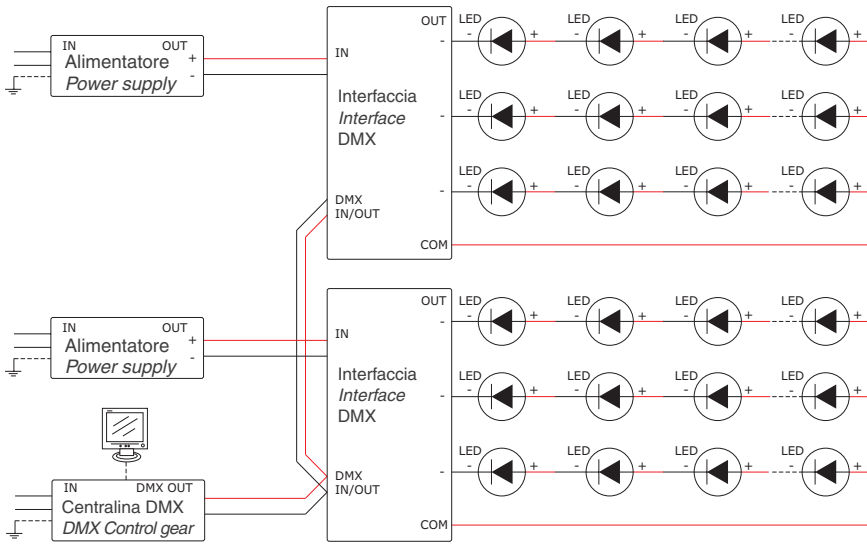

Interfaccia DMX
DMX interface
350 mA
 ECG.0005.0

Interfaccia DMX
DMX interface
500 mA
 ECG.0008.0

Centralina DMX
DMX control gear
 ECG.0001.0

Codici alimentatori
Power supply units
24 Vdc

- PSU.0001.0
- PSU.0005.0
- PSU.0006.0
- PSU.0007.0
- PSU.0008.0
- PSU.0009.0
- PSU.0010.0
- PSU.0011.0
- PSU.0012.0
- PSU.0013.0
- PSU.0014.0
- PSU.0015.0
- PSU.0016.0
- PSU.0017.0
- PSU.0018.0
- PSU.0020.0
- PSU.0021.0
- PSU.0030.0

* PC richiesto solo per la programmazione / PC only needed for programming